 


Package Contents


After opening the package, check that all the items on the list are included. If any items are missing, contact your dealer.

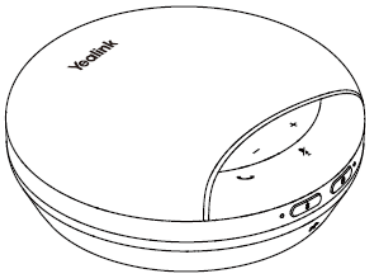


SP92



 
Zipper Bag

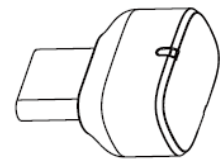


BT51C (optional)

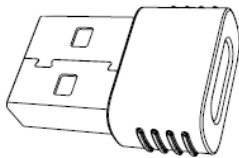 

USB C/A Adapter

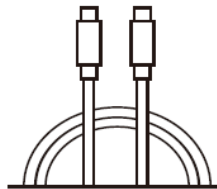 

USB 2.0 Cable
(USB-C to USB-C)

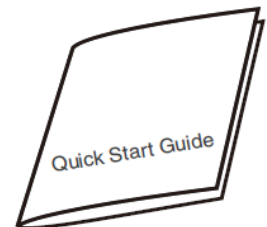 


Quick Start Guide



We recommend that you use the included accessories; other accessories may have compatibility issues that prevent them from working properly.

 Overview

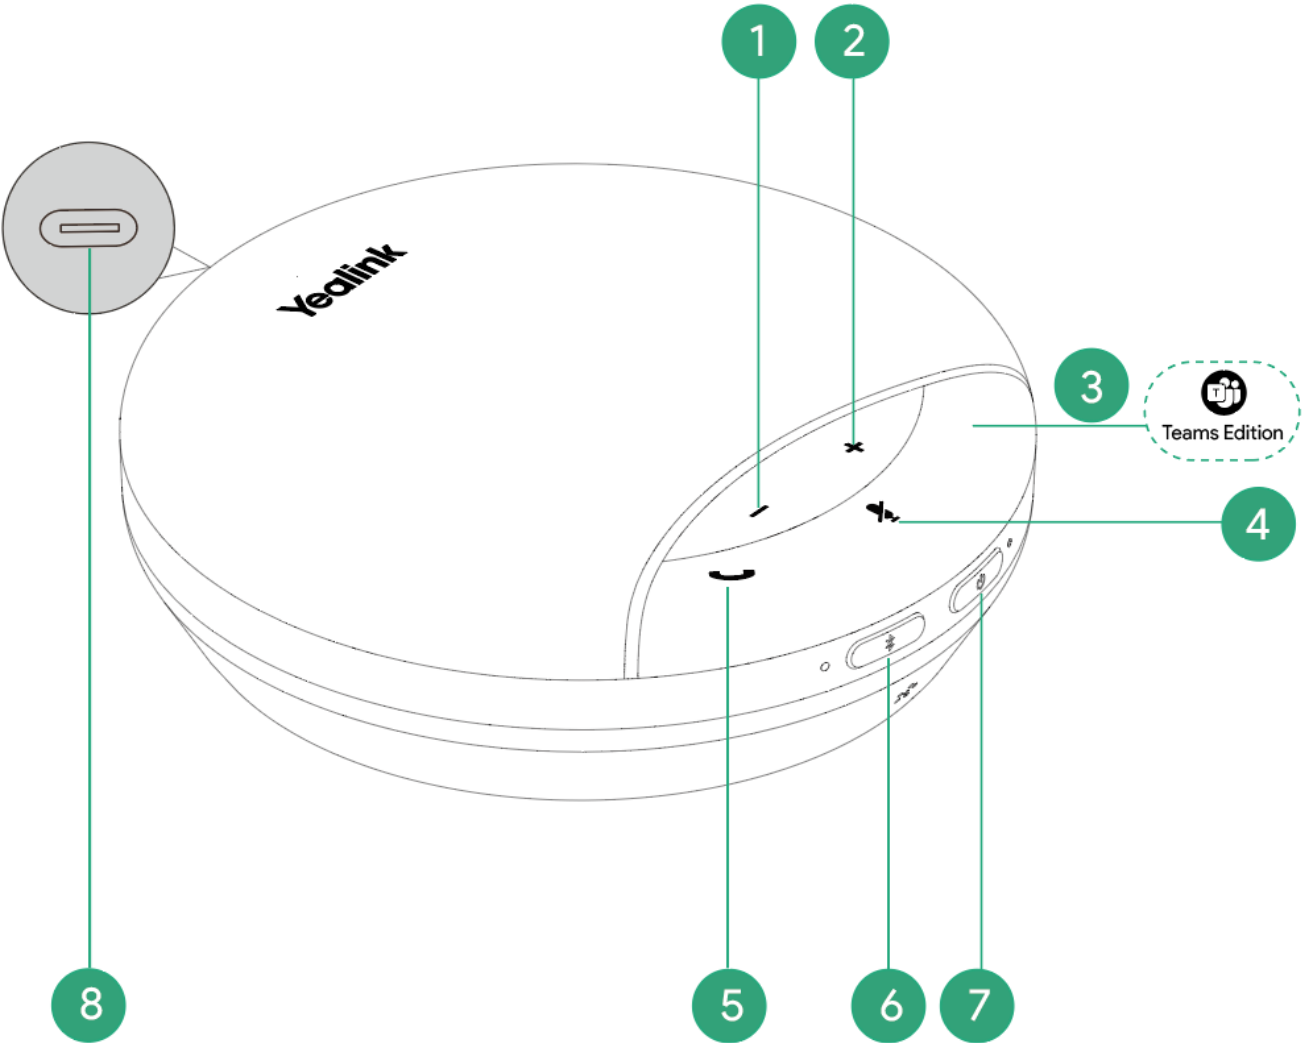


Item	Description
1	Tap to turn down the volume.
2	Tap to turn up the volume.
3	(Teams Edition) Tap to invoke the Teams client; Hold 2 seconds to activate Cortana.
4	Tap to mute.
5	• Tap to control calls. • Tap to play/pause music.
6	Hold 2 seconds to enter the pairing mode, search and connect on the smartphone. • Double-tap to disconnect. • Tap again to reconnect.

7	• Hold 3 seconds to power on/off. • Press to check the battery level.
8	USB-C port.

💡 If your speaker needs warranty service, the process is quick and easy. Please go to [warranty-service](#) and submit an RMA Claim to Yealink.

 Power On & Power Off

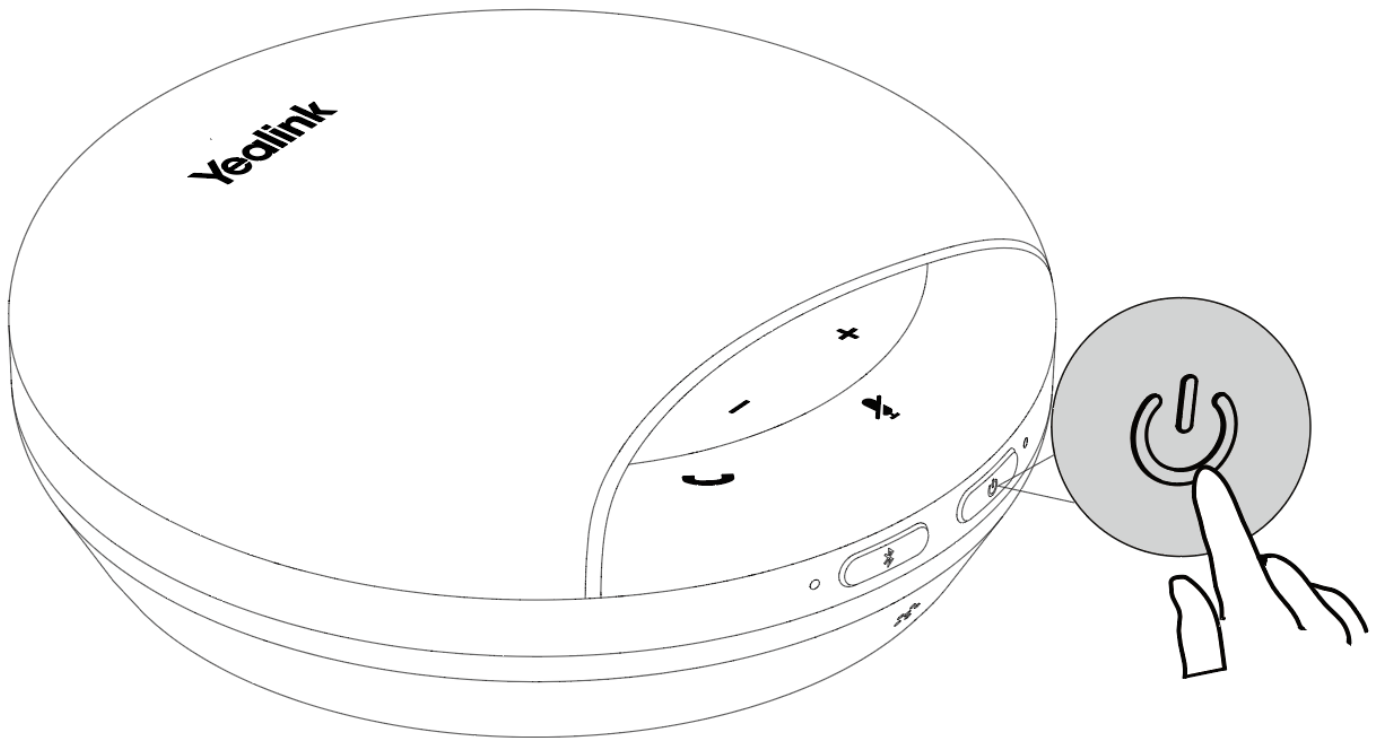

Power On

Do one of the following:

- Plug the speakerphone into a USB power source using the attached USB cable.
- Hold the **Power** button for 3 seconds.

The LED strip light will turn on from left to right, and the power indicator will turn on.

Power Off

Press and hold the **Power** button for 3 seconds. The LED strip light will turn off from right to left, and the power indicator will turn off.

 
! To preserve battery while unplugged, the speakerphone will automatically power off after 30 minutes of inactivity.

Charge SP92

Charge Speakerphone


Plug the speakerphone into a USB power source.

The SP92 battery lasts for up to 20 hours of talk time and takes approximately 2.5 hours to charge fully.

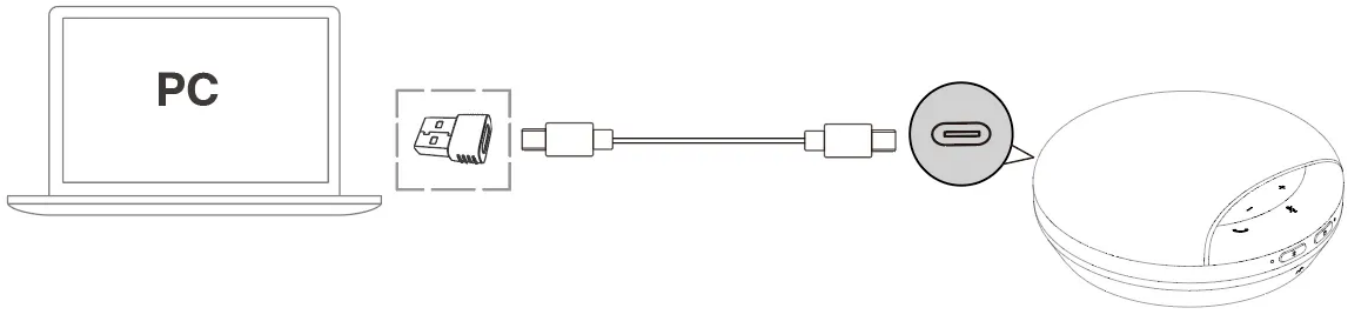


Check Battery Status

 
Press the **Power** button to check the current battery status.

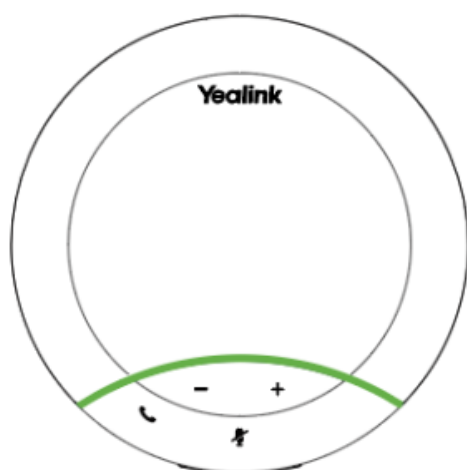

Full battery

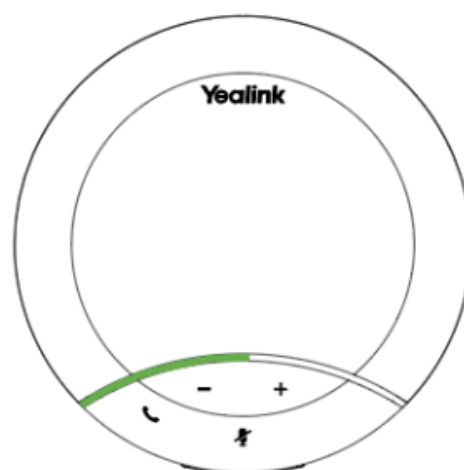 


Medium battery

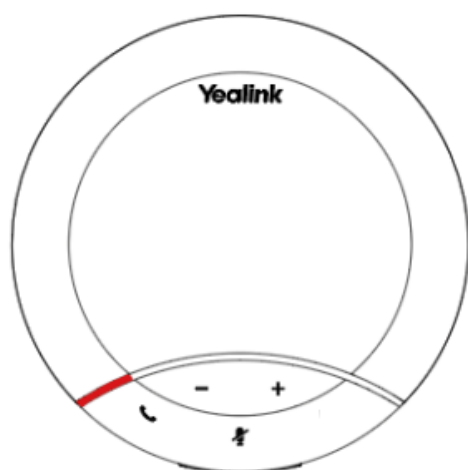 

Extremely low on power, flashing red


Connect SP92 to the PC

 Connect via USB Cable

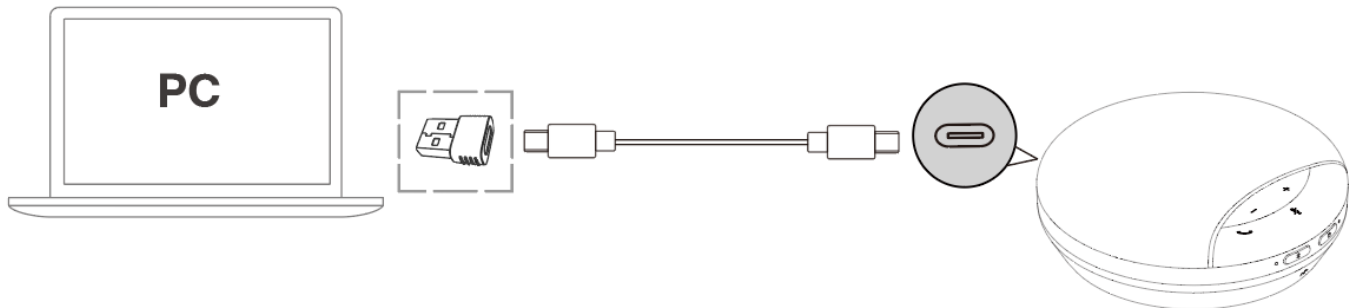


Connect via Bluetooth

 1. Connect the BT51C or BT51C with a USB-C/A adapter to a USB port on your PC.

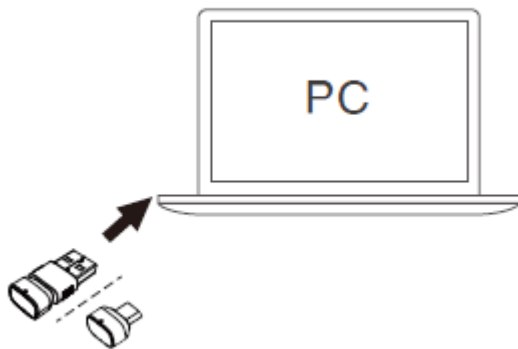

 2. Press and hold the  button for 3 seconds to enter pairing mode.
The SP92 will prompt “Bluetooth pairing” , and the Bluetooth LED will flash blue.

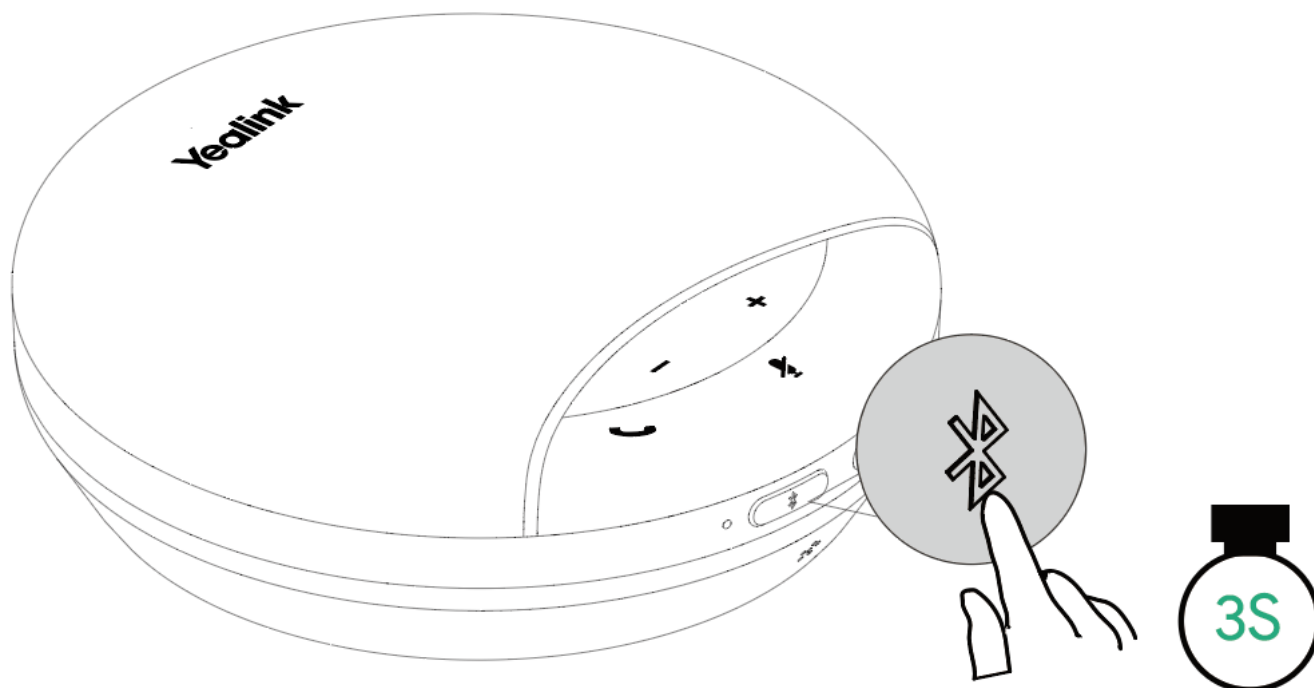

3. (Optional) If you wish to cancel pairing during this process, double-press  again. The SP92 will prompt "Cancel pairing" .
4. On your PC, select the SP92 from the list of available Bluetooth devices to connect. Once connected, the SP92 will display the prompt "PC connected," and the Bluetooth LED will turn solid blue.
5. To disconnect, double-press  . The SP92 will prompt " PC disconnected".
6. To reconnect, press  again.

- ! • If there is no sound coming from your SP92, you may need to set the SP92 as the playback device in your operating system's audio settings.
- You can connect your SP92 to 2 Bluetooth devices at the same time.


BT51 LED Indicator

LED Indicator	Description
Fast flashing red and blue	Pairing mode
Solid blue	Device connected
Slow flashing blue	Reconnect a device
Solid red	Mute active
Fast flashing purple	A coming call


Solid purple	Microsoft Teams connected/on a call
Slow flashing purple	Microsoft Teams notification
Off	No device connect

Connect SP92 to Mobile

 1. Press and hold the  button for 3 seconds to enter pairing mode.
The SP92 will prompt "Bluetooth pairing", and the Bluetooth LED will flash blue.

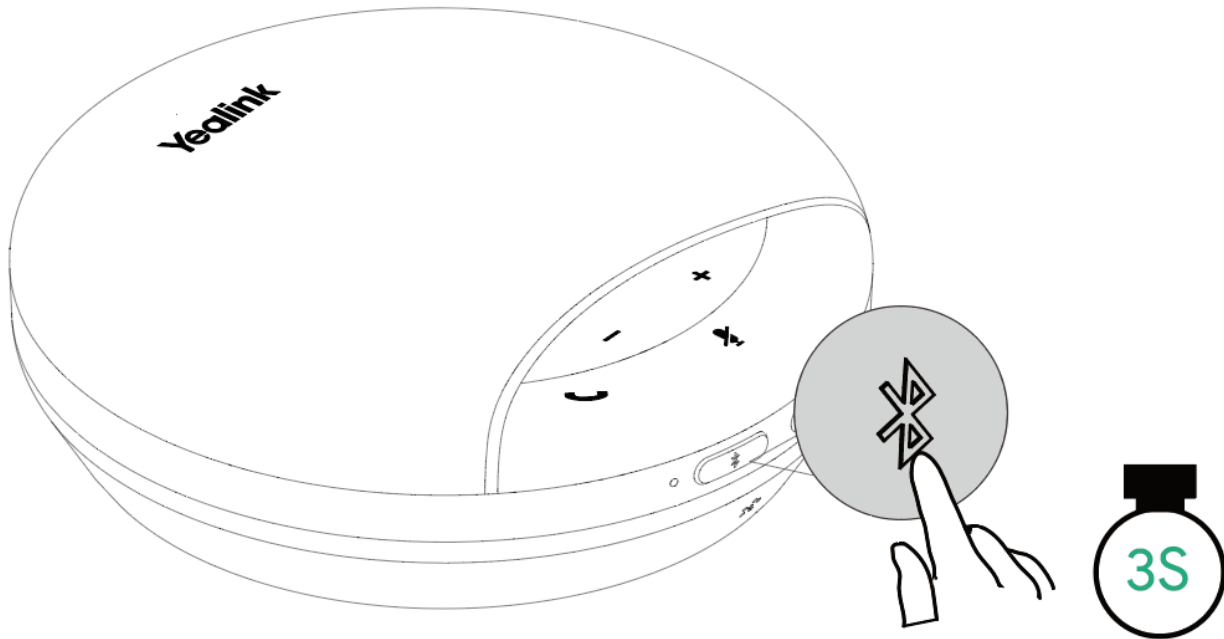

 2. Enable Bluetooth on your device and search for SP92. Once connected, the SP92 will display the prompt "Mobile 1 connected," and the Bluetooth LED will turn solid blue.

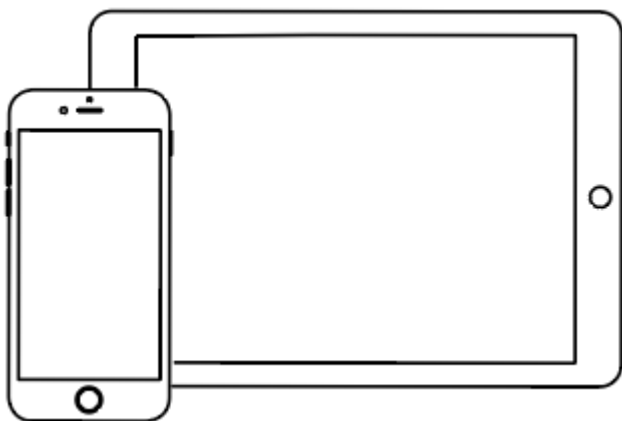


Connect SP92 to Two Devices

You can connect to one PC and one smartphone at the same time via Bluetooth, or connect to two smartphones.

Connect to PC and Smartphone

 You can connect your speakerphone to one PC and one smartphone at the same time.

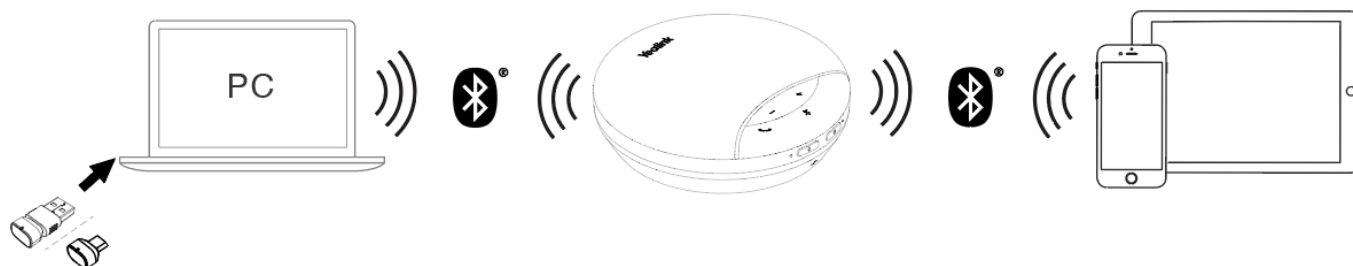

Before You Begin

 
Your speakerphone has been connected to your PC via Bluetooth dongle.

Procedure

1. Hold the  for 3 seconds.
2. Select the speakerphone from the Bluetooth device list on the smartphone to connect it.
3. You can simultaneously connect to both a PC and a smartphone.

Connect to Two Smartphones

You can connect your speakerphone to two smartphones at the same time via built-in Bluetooth.

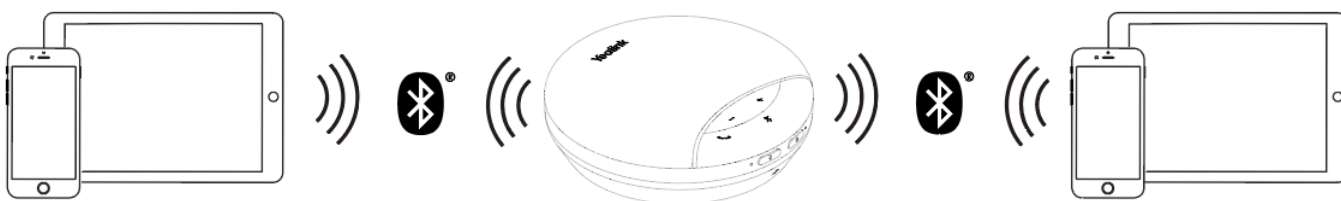

Before You Begin

Your speakerphone has connected to smartphone A.

Procedure

1. Hold the  for 3 seconds.
2. Select the speakerphone from the Bluetooth device list on smartphone B to connect it.

3. You can simultaneously connect to both smartphone A and smartphone B.

Disconnect Bluetooth Device

Disconnect Bluetooth Device

You can quickly disconnect the Bluetooth connection by tapping a button on the speakerphone.

Procedure

Double-press the  button. The SP92 will prompt "PC/Mobile disconnected".

Reconnect to Bluetooth Device

Reconnect to Bluetooth Device

After you disconnect a Bluetooth device, you can reconnect it to your speakerphone.

Procedure

Press the **Bluetooth** button.

- 💡 If the speakerphone has paired with BT51, when the speakerphone reconnects, it will try to connect to the BT51 and the last connected Bluetooth device.

 
Manually Pair SP92 with BT51 (Optional)

Manually Pair Speakerphone with BT51

The BT51 dongle of the SP92 has been pre-paired with the headset and is ready for use. If you want to pair the BT51 dongle with another speakerphone or a separately purchased BT51 dongle pairs with the speakerphone, it needs to be paired through Yealink USB Connect.

Before you begin: Make sure the headset is in Bluetooth pairing mode.

1. Select the BT51 dongle device CARD.
2. Click **Pair management**.
3. In the **Pairable devices List** field, click  to search for the pairable device.
4. Find the desired device and click **Start pairing**.

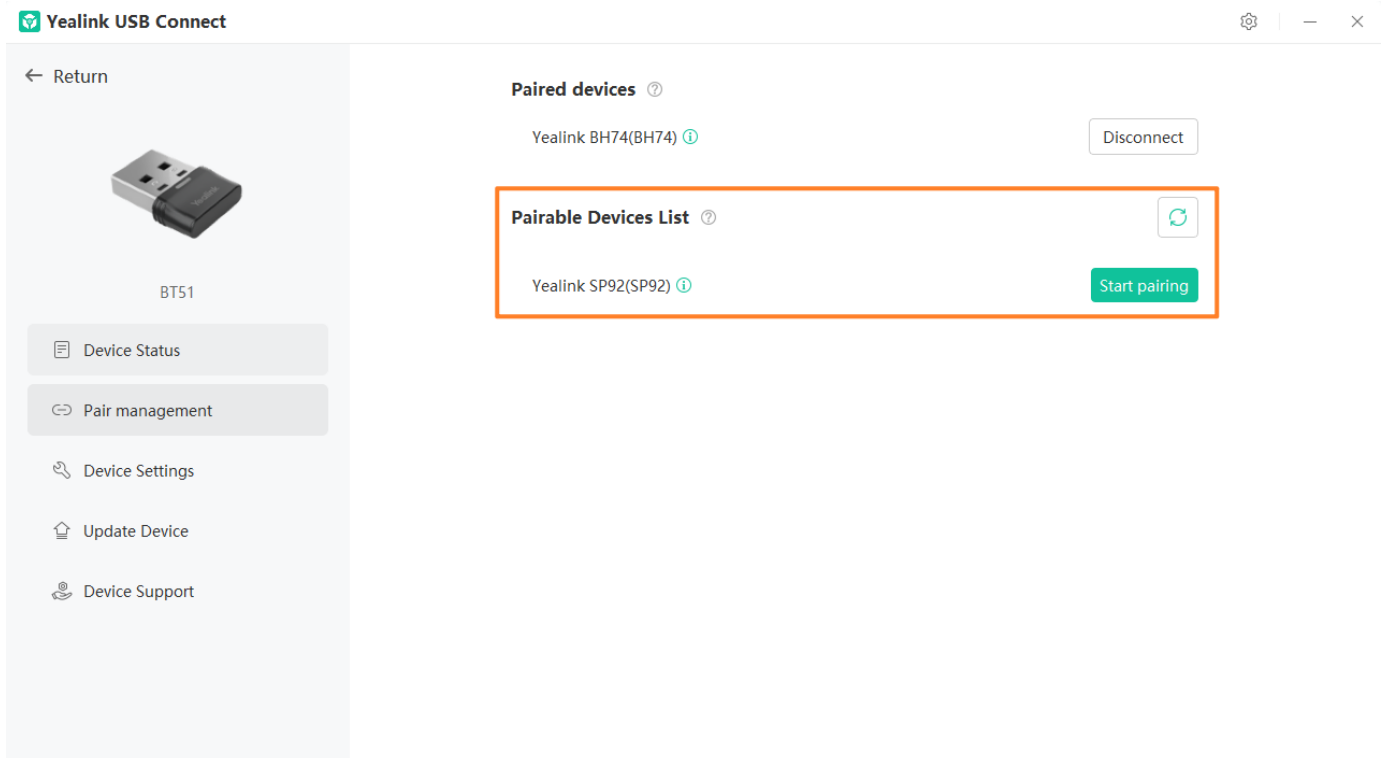


- One BT51 dongle can only save one speakerphone pairing information.
- If you want to pair the BT51 dongle with a new speakerphone, you need to unpair the old speakerphone first.
- If you want to pair the speakerphone with a new BT51 dongle, you need to make the speakerphone enter pairing mode. Then, search for the speakerphone on the new BT51 dongle through the Yealink USB Connect and connect it.

BT51 LED Indicator

LED	Description
Flash blue	Bluetooth connecting
Solid blue	Bluetooth connected
Off	Bluetooth disconnected


SP92 Deployment

 You can place the speaker within a 4-meter range, allowing 360-degree omnidirectional sound pickup.

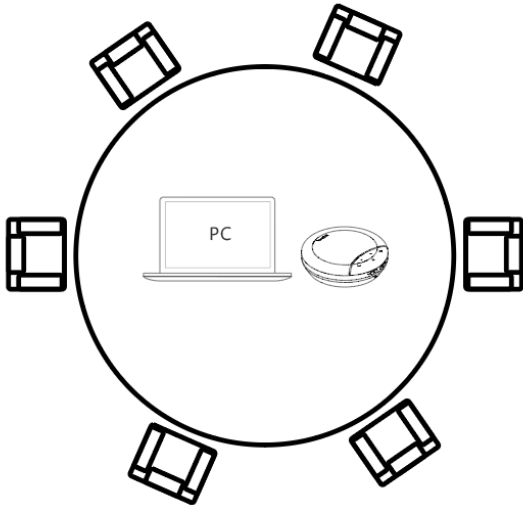

Call Control

 Basic Call

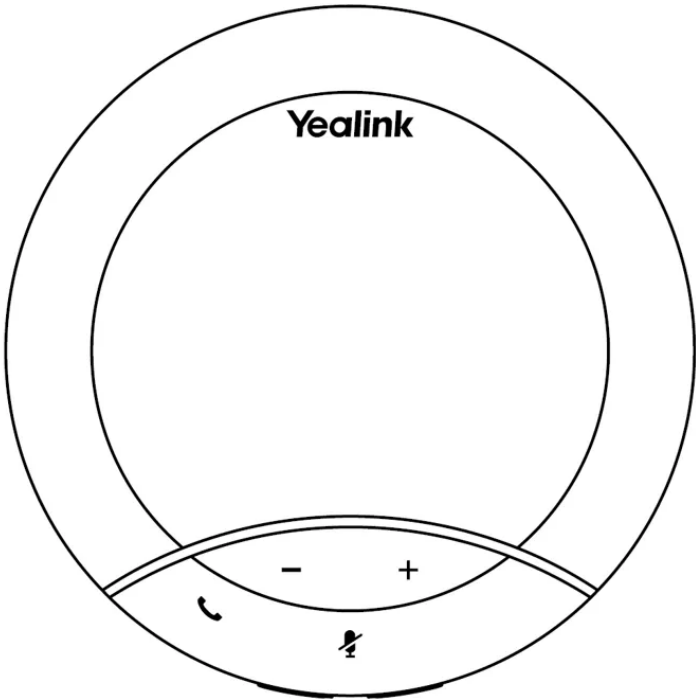

The SP92 is compatible with Microsoft Teams/Skype for Business clients and Yealink VCD clients. The SP92 can connect to a PC via USB cable or Bluetooth and to a smartphone via Bluetooth. After connecting, you can control the calls on the SP92.

Function	Action
Answer a call	Tap  .
End/reject a call	Tap  .
Volume up/down	Tap  /  .
Mute/unmute the microphone	During a call, tap  . The mute LED indicator turns solid red.
Hold a call	During a call, hold  for 2 seconds. The LED light flashes

	green.
Hold the current call and answer the new call	During a call, hold  for 2 seconds.
Answer the new call and hold the current call	During a call, tap  .
Reject the new call and continue the current call	During a call, double-tap  .
Reset to the factory	Press and hold  and  for 3 seconds.
Play/pause music	When the connected smartphone is playing music, tap  to pause. Tap  again to resume.

Create a Mix Conference

You can create a mix conference on the speakerphone.

Before you begin

- The speakerphone is connected to the PC via a USB cable and connected to the PC/ smartphone via Bluetooth.
- The speakerphone has one USB call and one Bluetooth call.

Procedure

 
1. Hold the  for 3 seconds.
2. The three-way conference for the mixed channel is successfully established.

Adjust Volume

Introduction

You can adjust the volume on the SP92. The volume level is synchronized between the speakerphone and the connected device, limited by the device's maximum volume. The LED strip on the SP92 will illuminate from left to right, visually indicating the current volume level.

Procedure

Tap the  button.

Voice Assistant Button

Introduction

If connected via USB cable or Bluetooth, you can use this button.

When used with the Teams client, the button LED indicator is as follows. When the voice assistant is activated, the button always glows white.

LED Indicator	Description
Slow-flashing white	When there are missed calls/voice mails/Teams meeting notifications
Solid white	Teams connected
Off	Teams disconnected

Invoke Teams Client

After the Teams client connects, tap the  button.

- ! Before using the Teams button functions, you should install the Microsoft Teams client on your PC. It works in the USB cable or BT51 connection.

Activate Voice Assistant

Hold the . button for 2 seconds.

- ! It depends on support from your connected smartphone.

Update Firmware

Related Topic: [Video: How to Update USB Speakerphone Firmware through Yealink USB Connect?](#)

What Is Firmware

Firmware is product software that controls how a device operates. To ensure your device performs optimally, we recommend updating the firmware to **the latest version**. Please go to the product support page to download the available firmware.

 
Check Firmware Version

Before You Begin

We recommend you upgrade Yealink USB Connect to the latest version.

Procedure

1. Run **Yealink USB Connect**.
2. Go to **Device status** to check the firmware version.

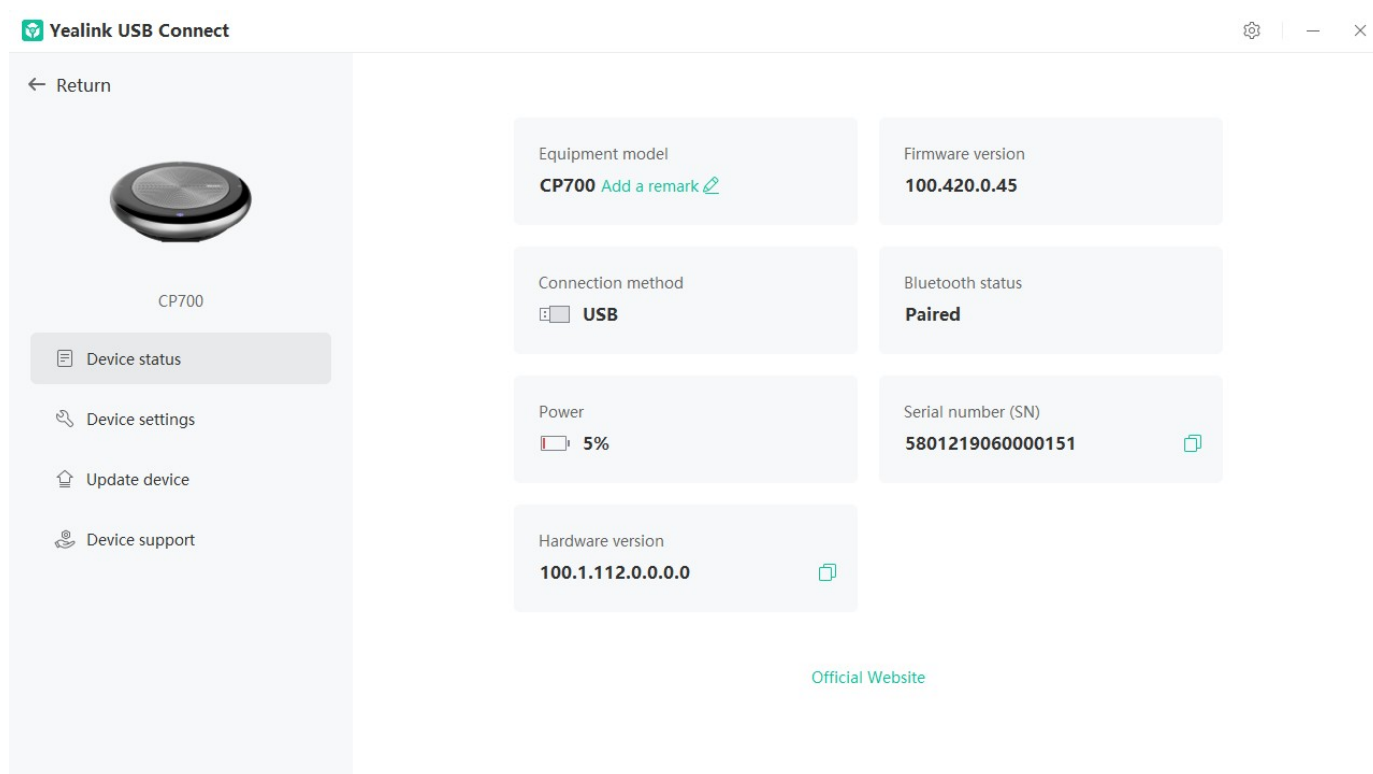

For more information on Yealink USB Connect, refer to the [Yealink USB Device Manager Client User Guide](#).

Update via Yealink USB Connect

 
The following takes CP700 for example.

Before You Begin

We recommend you upgrade Yealink USB Connect to the latest version.

Procedure

1. Connect the device to the PC via the USB cable.
2. Run **Yealink USB Connect**.
3. Go to **Update device**.
4. Do one of the following:
 - Click **Update Now** to update the firmware to the newest version automatically.
 - Click **Update Manually** to update the firmware to the specific version manually.
5. Confirm the action.
6. You need to download the firmware from the product documentation page first.

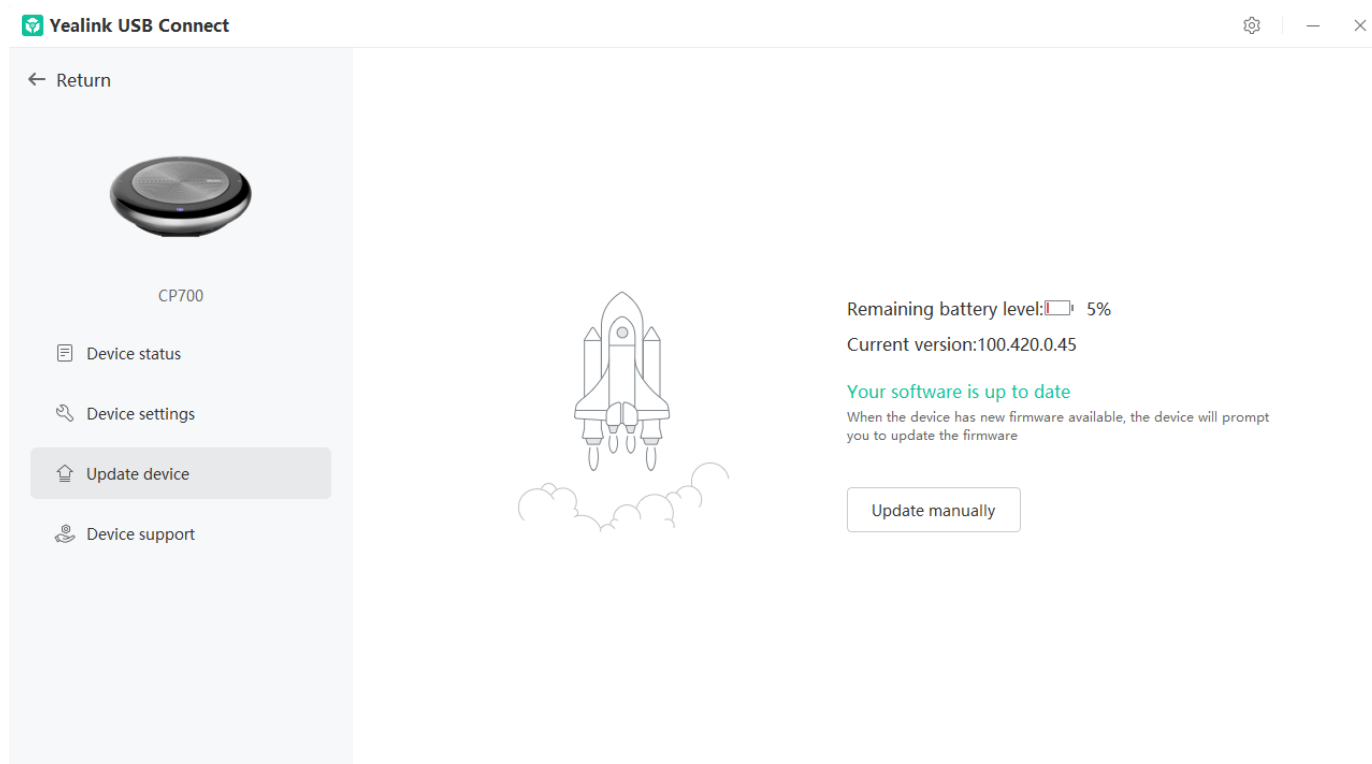

Update via YMCS/YDMP

Procedure

1. Enter the web user interface of the Yealink Management Cloud Service (YMCS)/Yealink Device Management Platform (YDMP).
2. Go to **Device Management** > **USB Device** to select the corresponding device, and click .

Home

Device Management

Phone Device

USB Device

Room System

Workspace Device

Firmware Management

Software Management

USB Device

Device ID/Device Name/Host IP

Search More

0 selected

Delete

Site Settings

Update Firmware

Update Software

Update Resource

Update Configuration

	Device ID	Model	Device Name	Host IP	Firmware Version..	Status	Operati...
☐	508000C072400...	WH62	YL1425-A04705PC	10.86.3.55	104.420.0.35	Offline	 
☐	506010C110000...	UVC20	YL2264-A04338PC	10.82.22.20	257.410.254.139	Offline	 
☐	88008191190001...	CP900	YL2264-A04338PC	10.82.22.78	100.420.0.47	Offline	 

3. Click **Update Firmware** to select the version and execution mode.

Firmware Upgrade

Note: After update, the current firmware will be overwritten

Model:
☒ WH62

Version source:
☒ Official Version ☐ Custom Version

* Select Version:
WH62:

Please select a version

104.435.0.10

104.435.0.5

104.434.0.25

104.433.0.25

104.433.0.10

104.432.0.15

Execution Mode
☒ At once ☐ Timing

OK

Cancel

4. Click **OK**.

Update Multiple Headsets

Introduction

You can use the Yealink USB Connect to upgrade the same model of devices in bulk. Bulk updates require at least two devices of the same model to be connected, and up to six can be connected.

Bulk Update

 
The following takes the CP700 for example:

1. Connect more than two devices to the PC.


💡 If the PC does not have enough ports, you can use a USB extender to connect the device to the PC.

2. Open the Yealink USB Connect software and select the desired device CARD.

3. Go to **Update device > Update Manually**.

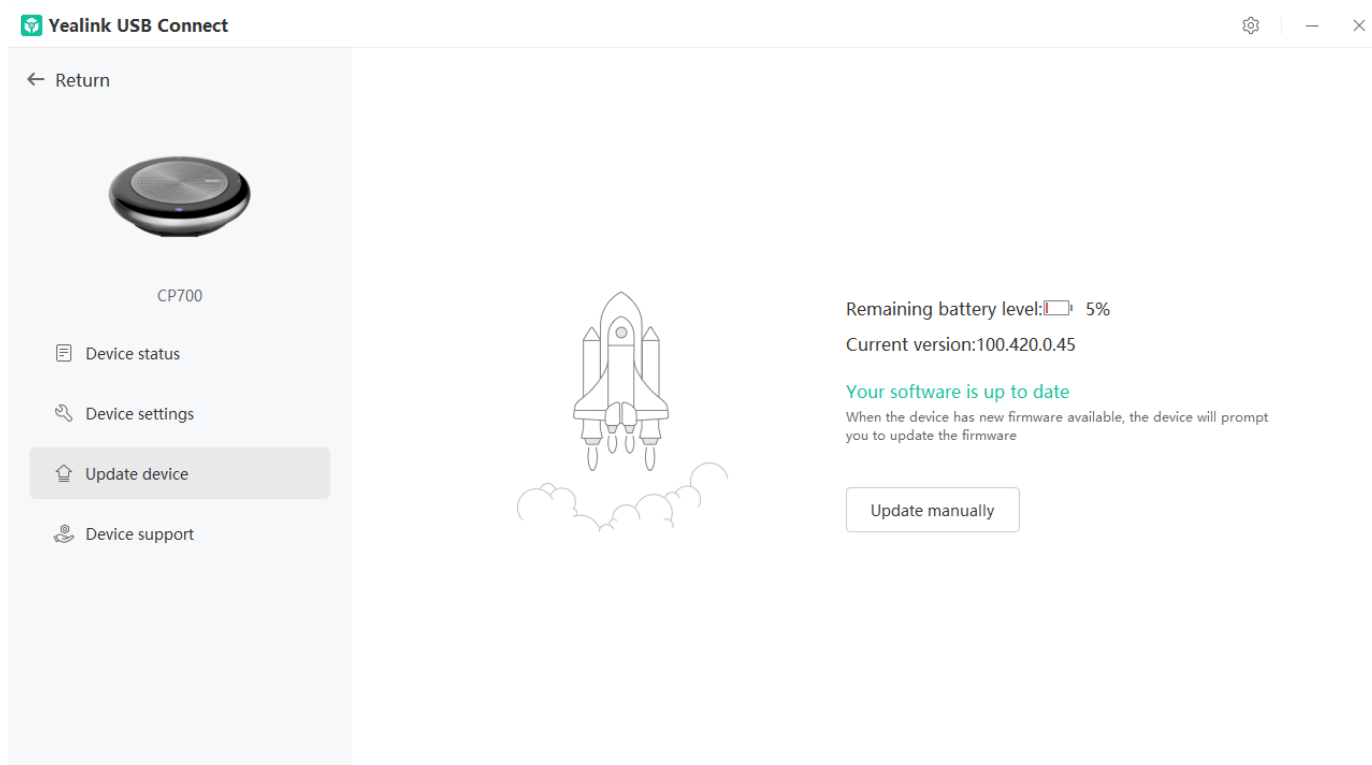

 
4. Click **Select all** to update all devices.

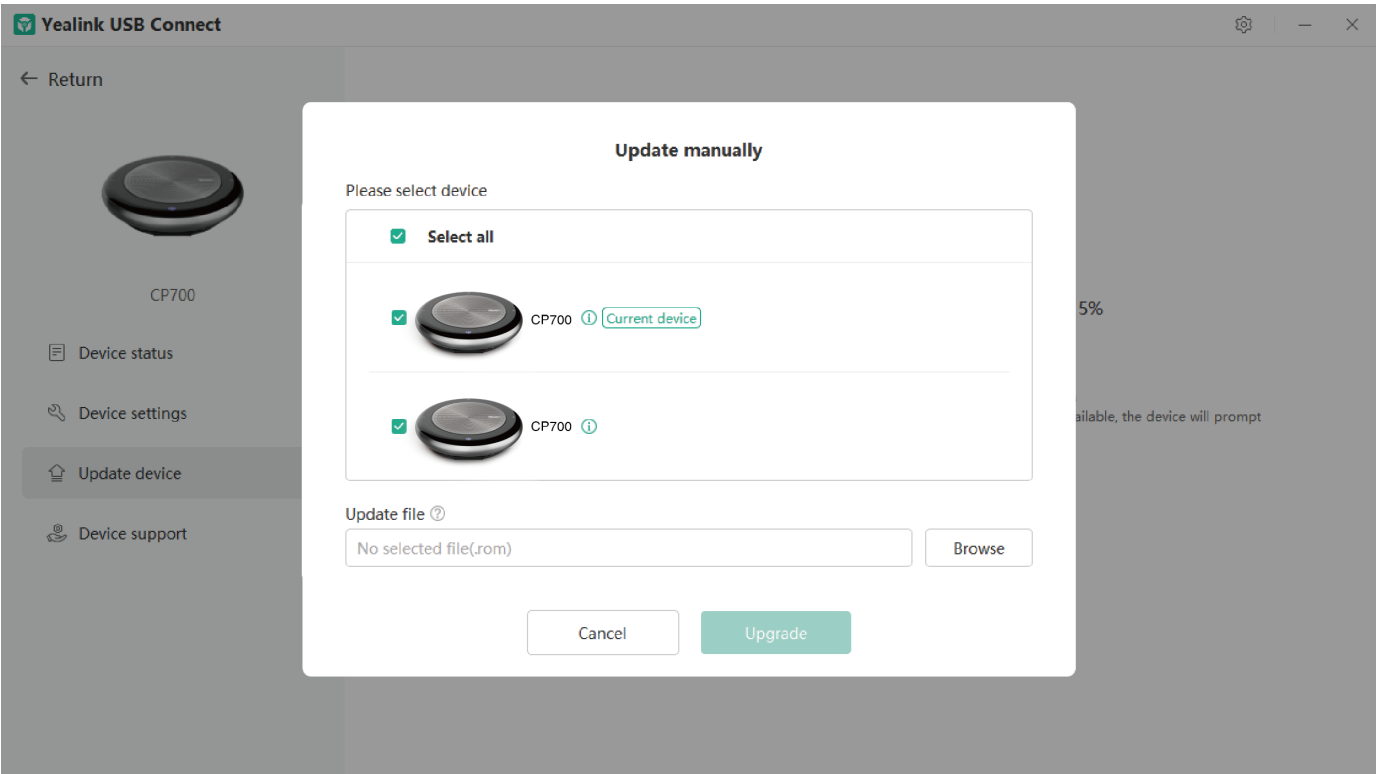

Basic Settings

You can change the basic settings of the headset via the [Yealink USB Connect](#).

 Go to **Device settings > General**.

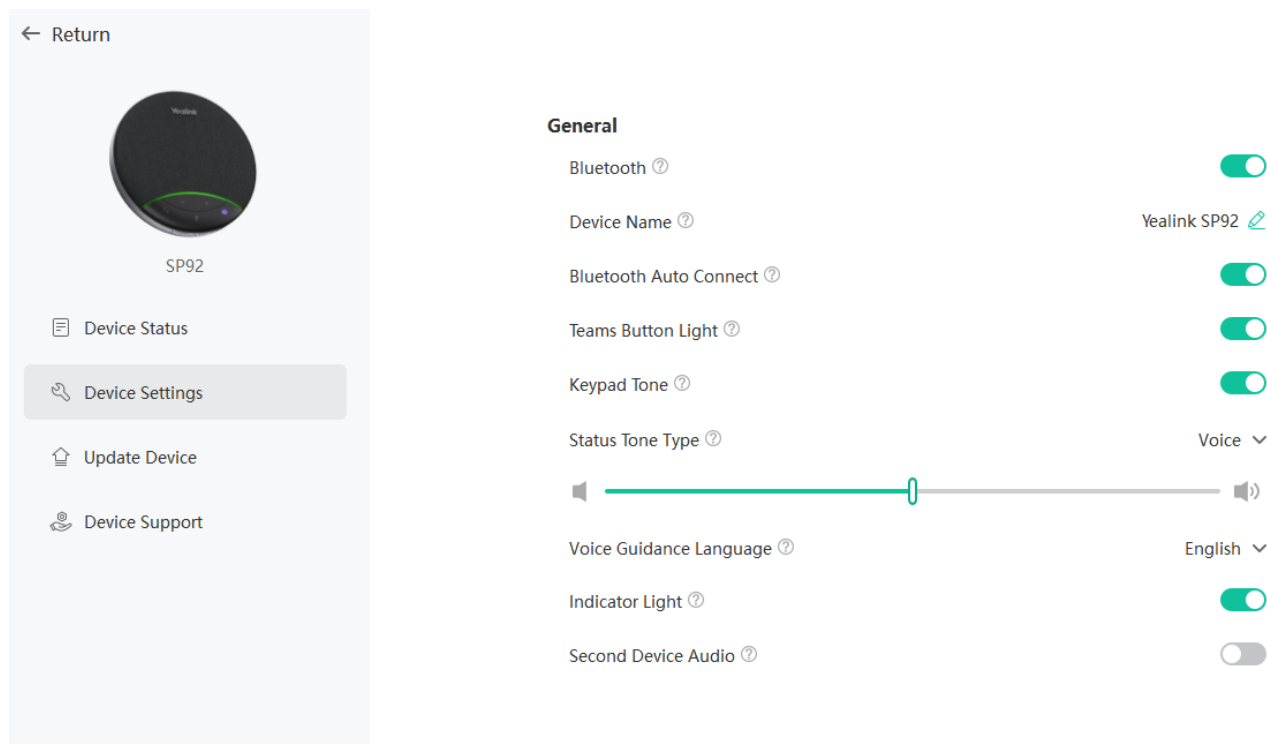

General

Function	Description
Bluetooth	Enable/disable Bluetooth.
Device Name	User-defined name of the Bluetooth device will take effect immediately after modification.
Bluetooth Auto Connect	Reconnect to the terminal device upon power-on automatically.
Keypad Tone	Set whether to play the key tone.
Status Tone Type	Select the type of status tone. • Voice (Default) • Ringtones • Off

Voice Guidance Language	Select the voice guidance from a language list. • English (Default) • Chinese • German • French • Spanish
Indicator Light	Enable the speakerphone's LED strip lighting.
Second Device Audio	Set the playback priority for multi-device music. • Disable (First play priority): The speaker is connected to device 1 and device 2. Device 1 plays music first, device 2 plays music later, and the headset still only plays the music of device 1. • Enable (Last play priority): The speaker is connected to device 1 and device 2. Device 1 plays music first, device 2 plays music later, and the headset will play the music of device 2.

Auto Power Off

Function	Description
Connected state	Set the automatic shutdown time for the speakerphone when it is connected and remains idle.
Disconnected state	Set the automatic shutdown time for the speakerphone when it is in an idle state without being connected.

Calling

Function	Description
MFB Button	In the idle state, select and press MFB to play/pause music or pick up the device to enter the call state. • HOOK • Play/Pause (Default)
MFB Once to Second Call	When the second call comes, you can use this configuration to define the performance of pressing the MFB button once. • Hold current call • End current call (Default) • End current call only

Call Control with Softphone	Enable USB call control or not.
Local Ringtone	Set whether to play local built-in ringtones.

Factory Reset

You can reset the speakerphone to factory settings when it is idle. After a factory reset, all personalized settings are cleared.

- In the Speakerphone

Press and hold  and  for 3 seconds.

- In the Yealink USB Connect

1. Open the [Yealink USB Connect](#) software and select the desired device CARD.
2. Go to **Device Support > Restore factory settings**.

! The Bluetooth pairing information will be cleared after a factory reset. It is necessary to repair the speakerphone with your Bluetooth device or BT50.

Reboot

Reboot Device

- In the Phone

Press and hold  for 3 seconds.

- In the Yealink USB Connect

1. Open the [Yealink USB Connect](#) software and select the desired device CARD.
2. Go to **Device Support > Reboot device.**

Bind Speaker Phone to YMCS Platform

Introduction

Yealink Management Cloud Service (YMCS) is based on cloud architecture and has various management functions. The management platform allows enterprise administrators to deploy and configure Yealink devices used in an enterprise.

Enter the address of YMCS (<https://ymcs.yealink.com>) in the browser. For more information, please refer to [Yealink Management Cloud Service](#) or contact Yealink technical support.

Browser Requirements

YMCS supports the following browsers:

Browser	Version
Firefox	55 or later
Chrome	55 or later
Internet Explorer	11 or later
Safari	10 or later

How to Bind

You can refer to the [document](#) to bind your devices.